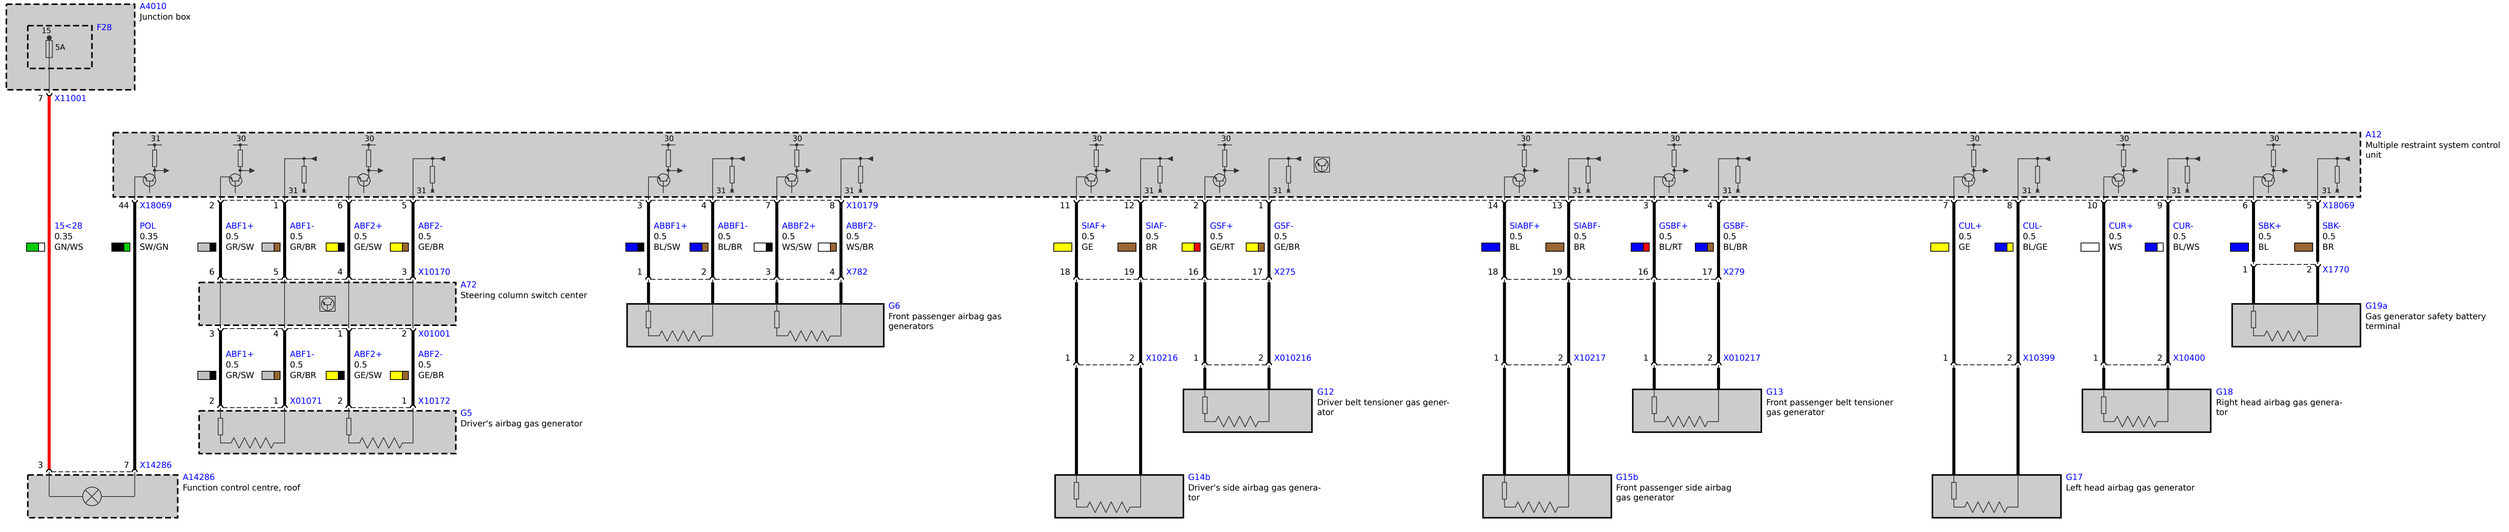
A4010
Junction box
F28
15
5A
7
X11001
15<28
0.35
GN/WS
POL
0.35
SW/GN
3
7
X14286
A14286
Function control centre, roof
31
30
31
30
31
44
X18069
2
1
6
5
ABF1+
0.5
GR/SW
ABF1-
0.5
GR/BR
ABF2+
0.5
GE/SW
ABF2-
0.5
GE/BR
X10170
A72
Steering column switch center
3
4
1
2
X01001
X01071
X10172
G5
Driver's airbag gas generator
3
4
7
8
X10179
ABBF1+
0.5
BL/SW
ABBF1-
0.5
BL/BR
ABBF2+
0.5
WS/SW
ABBF2-
0.5
WS/BR
X782
G6
Front passenger airbag gas generators
11
12
2
1
SIAF+
0.5
GE
SIAF-
0.5
BR
GSF+
0.5
GE/RT
GSF-
0.5
GE/BR
18
19
16
17
X275
X10216
X010216
G12
Driver belt tensioner gas generator
G14b
Driver's side airbag gas generator
14
13
3
4
SIABF+
0.5
BL
SIABF-
0.5
BR
GSBF+
0.5
BL/RT
GSBF-
0.5
BL/BR
X279
X10217
X010217
G13
Front passenger belt tensioner gas generator
G15b
Front passenger side airbag gas generator
7
8
10
9
6
5
CUL+
0.5
GE
CUL-
0.5
BL/GE
CUR+
0.5
WS
CUR-
0.5
BL/WS
SBK+
0.5
BL
SBK-
0.5
BR
X10399
X10400
X1770
G17
Left head airbag gas generator
G18
Right head airbag gas generator
G19a
Gas generator safety battery terminal
A12
Multiple restraint system control unit