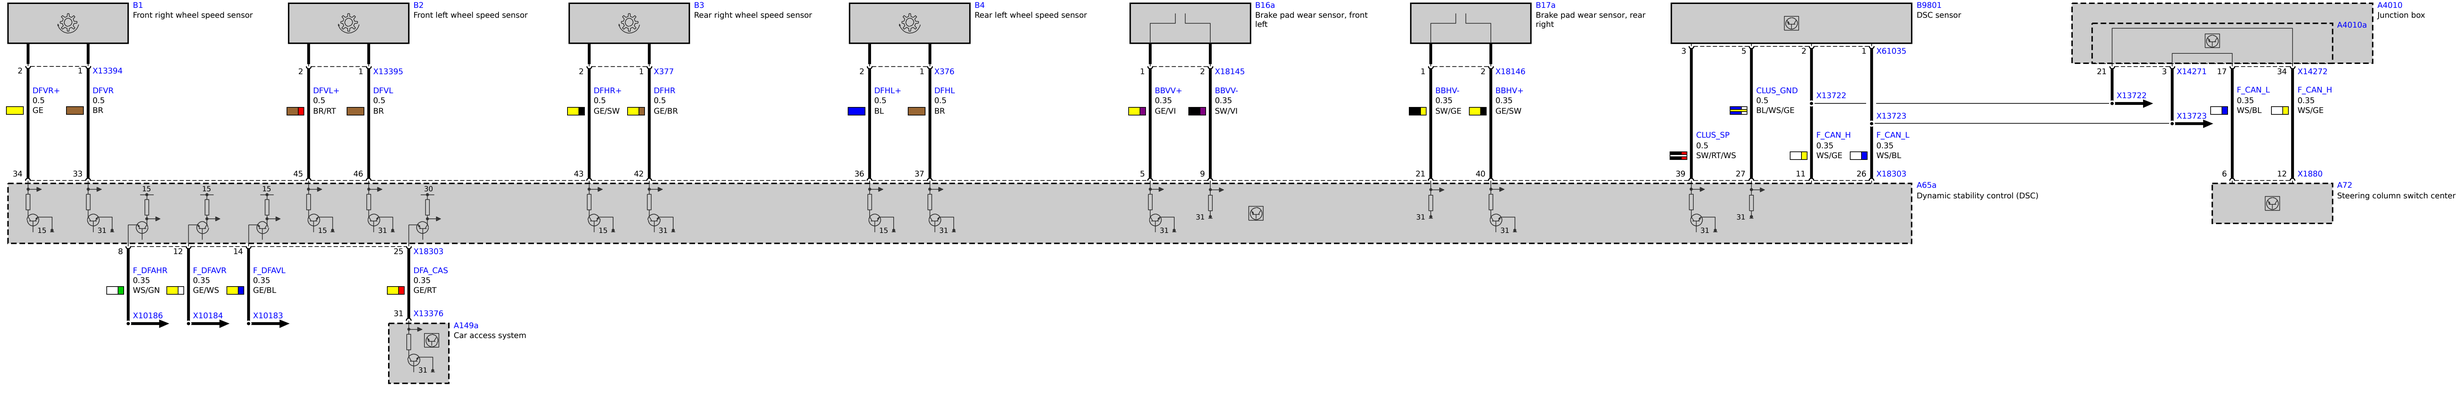
B1
Front right wheel speed sensor
2
1
X13394
DFVR+
0.5
GE
DFVR
0.5
BR
34
33
B2
Front left wheel speed sensor
X13395
DFVL+
0.5
BR/RT
DFVL
0.5
BR
45
46
B3
Rear right wheel speed sensor
X377
DFHR+
0.5
GE/SW
DFHR
0.5
GE/BR
43
42
B4
Rear left wheel speed sensor
X376
DFHL+
0.5
BL
DFHL
0.5
BR
36
37
B16a
Brake pad wear sensor, front left
X18145
BBVV+
0.35
GE/VI
BBVV-
0.35
SW/VI
5
9
B17a
Brake pad wear sensor, rear right
X18146
BBHV-
0.35
SW/GE
BBHV+
0.35
GE/SW
21
40
B9801
DSC sensor
X61035
CLUS_SP
0.5
SW/RT/WS
CLUS_GND
0.5
BL/WS/GE
F_CAN_H
0.35
WS/GE
F_CAN_L
0.35
WS/BL
39
27
11
26
X13722
X13723
A4010
Junction box
A4010a
21
3
17
34
X14271
X14272
F_CAN_L
0.35
WS/BL
F_CAN_H
0.35
WS/GE
6
12
X1880
A72
Steering column switch center
X18303
A65a
Dynamic stability control (DSC)
15
31
30
8
12
14
25
F_DFAHR
0.35
WS/GN
F_DFAVR
0.35
GE/WS
F_DFAVL
0.35
GE/BL
DFA_CAS
0.35
GE/RT
X10186
X10184
X10183
X13376
A149a
Car access system