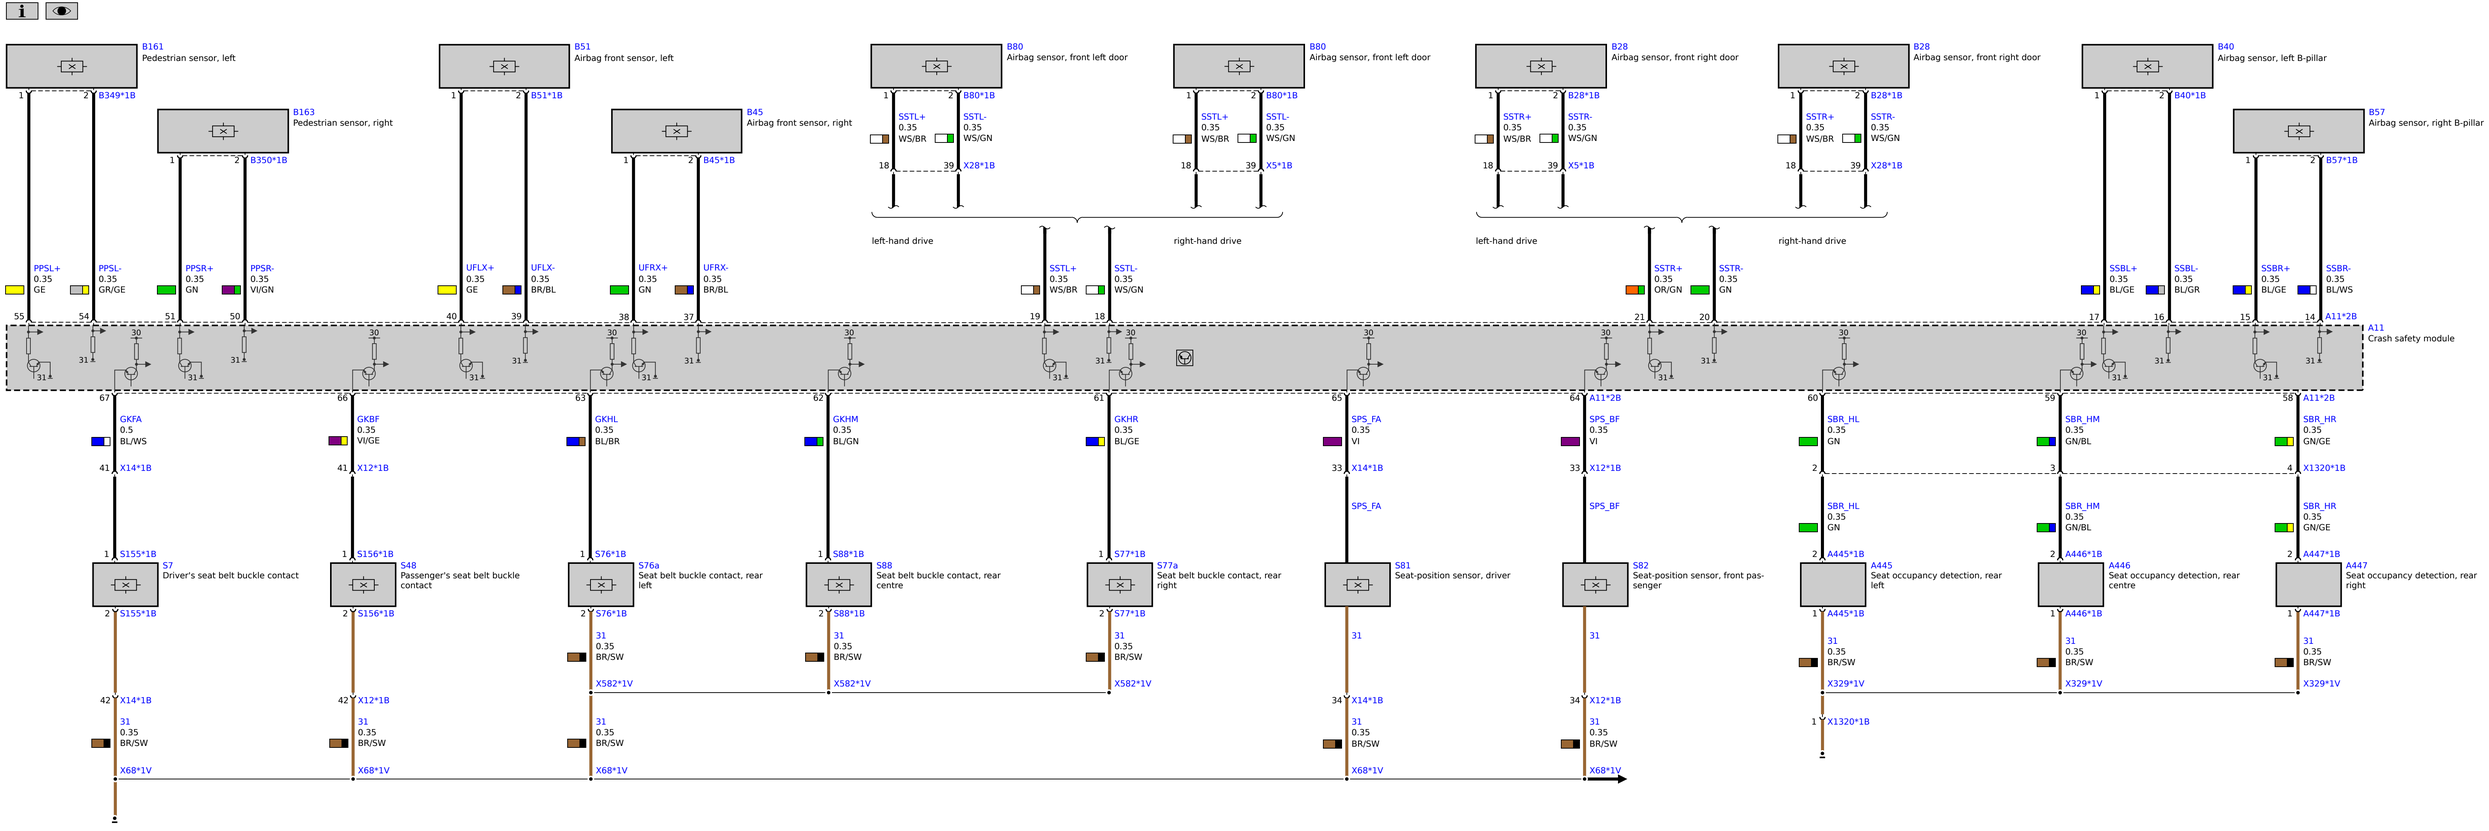
B161
Pedestrian sensor, left
B349*1B
B163
Pedestrian sensor, right
B350*1B
B51
Airbag front sensor, left
B51*1B
B45
Airbag front sensor, right
B45*1B
B80
Airbag sensor, front left door
B80*1B
SSTL+
0.35
WS/BR
SSTL-
0.35
WS/GN
X28*1B
B80
Airbag sensor, front left door
B80*1B
SSTL+
0.35
WS/BR
SSTL-
0.35
WS/GN
X5*1B
B28
Airbag sensor, front right door
B28*1B
SSTR+
0.35
WS/BR
SSTR-
0.35
WS/GN
X5*1B
B28
Airbag sensor, front right door
B28*1B
SSTR+
0.35
WS/BR
SSTR-
0.35
WS/GN
X28*1B
B40
Airbag sensor, left B-pillar
B40*1B
B57
Airbag sensor, right B-pillar
B57*1B
left-hand drive
right-hand drive
left-hand drive
right-hand drive
PPSL+
0.35
GE
PPSL-
0.35
GR/GE
PPSR+
0.35
GN
PPSR-
0.35
VI/GN
UFLX+
0.35
GE
UFLX-
0.35
BR/BL
UFRX+
0.35
GN
UFRX-
0.35
BR/BL
SSTL+
0.35
WS/BR
SSTL-
0.35
WS/GN
SSTR+
0.35
OR/GN
SSTR-
0.35
GN
SSBL+
0.35
BL/GE
SSBL-
0.35
BL/GR
SSBR+
0.35
BL/GE
SSBR-
0.35
BL/WS
A11*2B
A11
Crash safety module
GKFA
0.5
BL/WS
X14*1B
S155*1B
S7
Driver's seat belt buckle contact
S155*1B
X14*1B
BR/SW
X68*1V
GKBF
0.35
VI/GE
X12*1B
S156*1B
S48
Passenger's seat belt buckle contact
S156*1B
X12*1B
BR/SW
X68*1V
GKHL
0.35
BL/BR
S76*1B
S76a
Seat belt buckle contact, rear left
S76*1B
BR/SW
X582*1V
BR/SW
X68*1V
GKHM
0.35
BL/GN
S88*1B
S88
Seat belt buckle contact, rear centre
S88*1B
BR/SW
X582*1V
GKHR
0.35
BL/GE
S77*1B
S77a
Seat belt buckle contact, rear right
S77*1B
BR/SW
X582*1V
SPS_FA
0.35
VI
X14*1B
SPS_FA
S81
Seat-position sensor, driver
X14*1B
BR/SW
X68*1V
SPS_BF
0.35
VI
X12*1B
SPS_BF
S82
Seat-position sensor, front passenger
X12*1B
BR/SW
X68*1V
SBR_HL
0.35
GN
SBR_HL
0.35
GN
A445*1B
A445
Seat occupancy detection, rear left
A445*1B
BR/SW
X329*1V
X1320*1B
SBR_HM
0.35
GN/BL
SBR_HM
0.35
GN/BL
A446*1B
A446
Seat occupancy detection, rear centre
A446*1B
BR/SW
X329*1V
SBR_HR
0.35
GN/GE
X1320*1B
SBR_HR
0.35
GN/GE
A447*1B
A447
Seat occupancy detection, rear right
A447*1B
BR/SW
X329*1V